


INSTALLATION NOTES

1. Set door speeds, force, time delay and verify proper door operation prior to final connection of sensors system.
2. Primary activation must be Knowing Act. If not then technician MUST WALK TEST to verify function and detection patterns comply with ANSI/BHMA A156.10 requirements.
3. On Knowing Act applications, push/pull activation must be disabled.
4. When using two controls (Sim Pair, Double Egress) connect OC-904 wires (except purple wires) to CU ESD Master control. Ensure sync cable is installed between CU-ESD boards. See Warning for Double Egress.

WARNING!
DOUBLE EGRESS
 When modifying the red & black wires of the Besam Sync Cable for Double Egress Applications, Parameter Group 6 must be selected on both Besam controls to ensure proper safety operation.

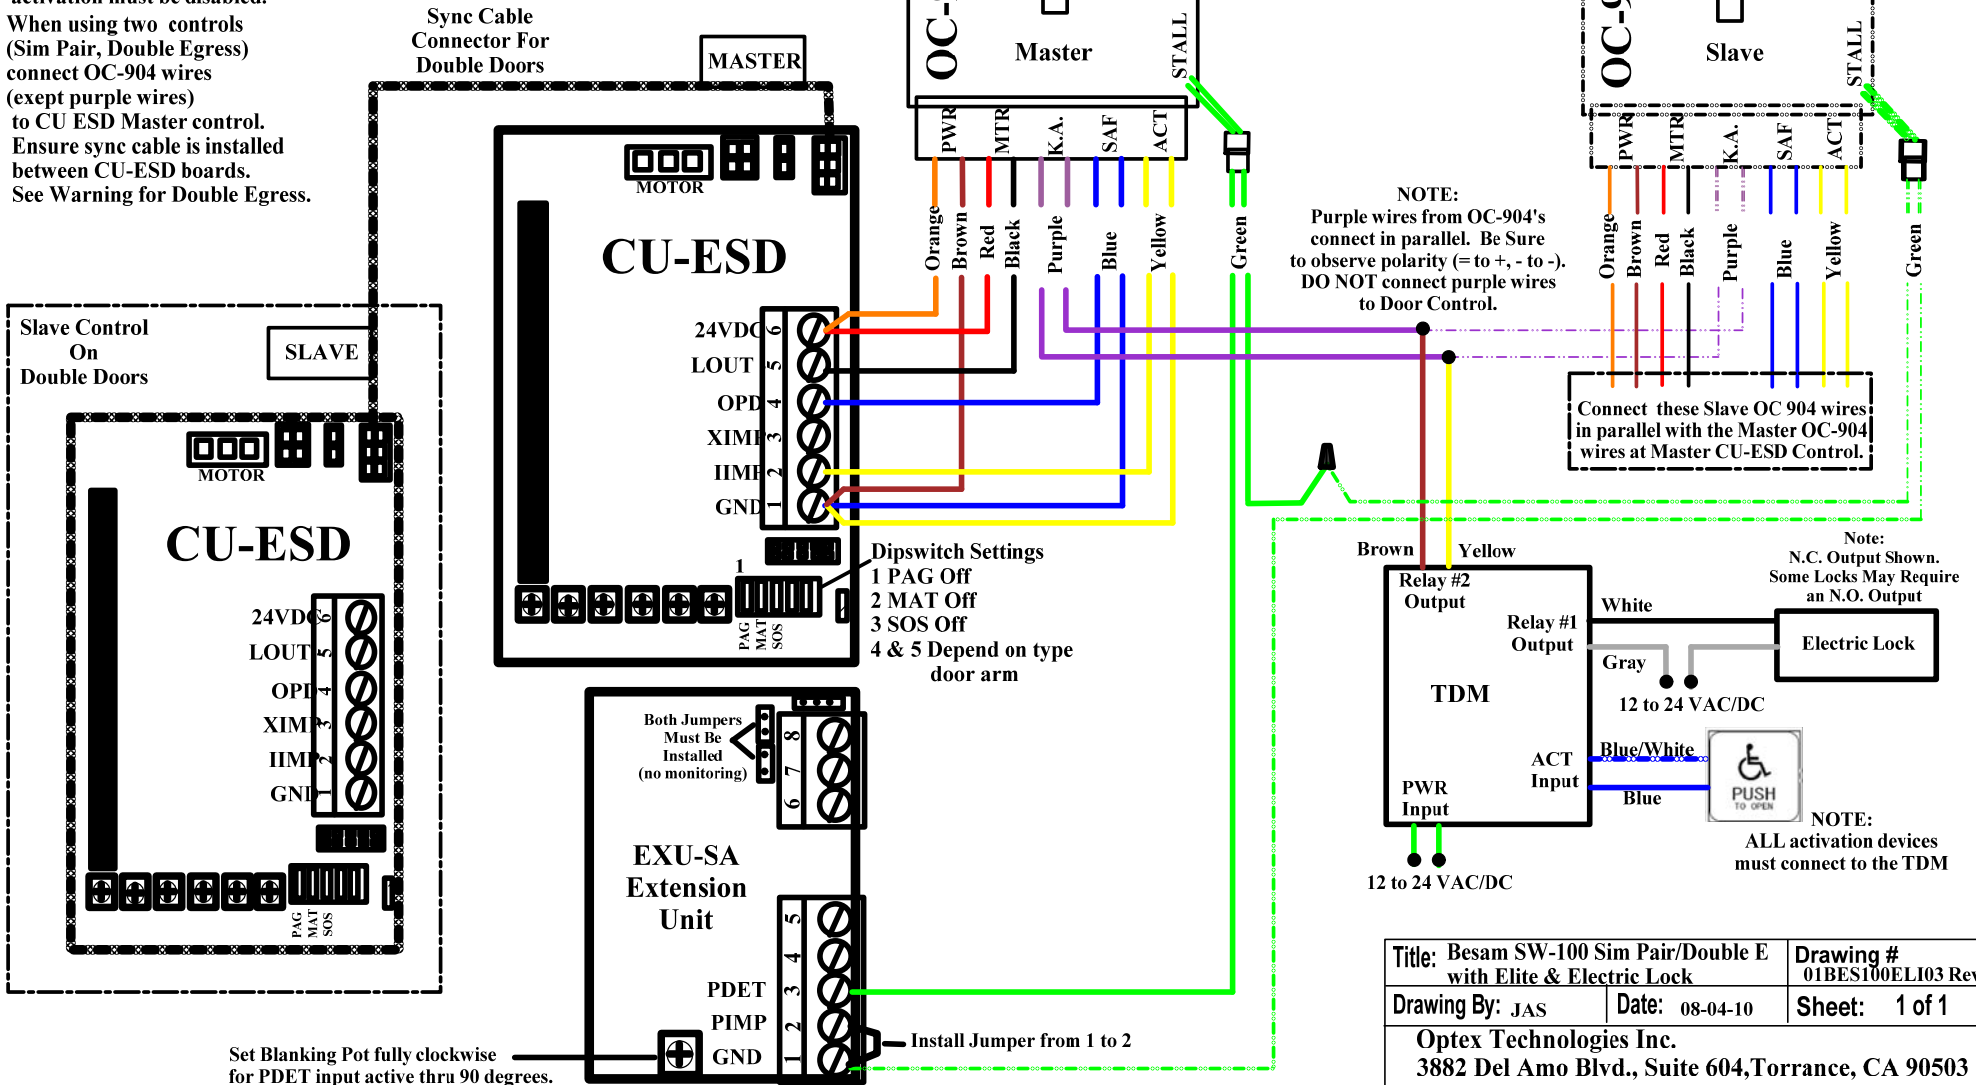

Title: Besam SW-100 Sim Pair/Double E with Elite & Electric Lock		Drawing # 01BES100ELI03 Rev 1
Drawing By: JAS	Date: 08-04-10	Sheet: 1 of 1
Optex Technologies Inc. 3882 Del Amo Blvd., Suite 604, Torrance, CA 90503 Office: (800)877-6656, Fax: (310)214-8655		